

# IMPORTANT

## **Do Not Discharge The Battery As You Would Do For A NI-CAD Battery!**

The main battery in the Time Machine is a “sealed lead-acid” type which does not exhibit the memory problem associated with Ni-Cad type batteries.

The Time Machine’s battery will actually provide better performance and last longer if it is maintained fully charged after being used.

**To ensure a long battery life, we suggest you fully charge the Time Machine before and after each usage or once per month if it is to be shelved for an extended period of time.**

**The charge light will turn from orange to green (or near green) when the battery is fully charged.**